


# ARB


# RECOVERY

## E-Z DEFLATOR - FOR RAPID TYRE DEFLATION

### INSTRUCTIONS

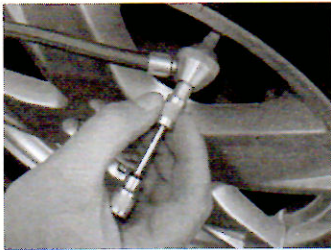

1. With the slide valve pushed forward, thread the valve stem adaptor onto the valve stem in a clockwise direction.

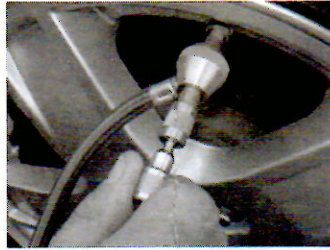


2. Push the valve core remover forward until it engages the valve and turn anti-clockwise to remove valve.



3. When the valve core is removed it will push the core remover out and the gauge will read the tyre pressure.



4. Pull out on the slide valve to release air. Push in on the slide valve to stop air and check the pressure. Note, gauge will not show correct pressure whilst deflating.

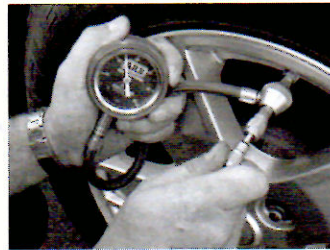

5. When the desired pressure is reached, push the valve core remover in and turn clockwise until the valve seats firmly. Note: Do not over tighten the valve core.



6. Remove the unit by turning the valve stem adaptor in an anti-clockwise direction. Ensure a valve cap is placed on the valve stem to prevent ingress of debris.